

Pumpkin X

Android KITKAT 4.4 Tablet PC

Reference Guide

10.1" Android KITKAT 4.4 Quad Core Edition

AmericanPumpkins.com

Table of Contents

Table of Contents	0
Thank You	3
Safety Information	3
Android Kitkat 4.4.....	5
Quick Start	5
Powering On/Off	5
Using Touch Screen	5
Home Screen	6
Organize Your Home-screen	6
Settings	7
Date & Time	7
Wi-Fi.....	7
Display.....	7
Sound	8
Bluetooth	8
Basic Functions.....	9
Internet	9
Email	9
Video.....	10
Music	10
Audio Recorder.....	10
Camera.....	11
Gallery.....	11
Google Play Store	12
Calendar.....	12

Clock	12
File Storage.....	13
Check Storage & Android Updates	13
Printing.....	14
Downloads	14
Chromecast	15
Extended Storage Options	15
Connecting to PC	16
Connecting to Keyboard / Joystick / mice & other devices	16
HDMI – Link Pumpkin X to your TV.....	16
3G Calling	16
Accessibility.....	17
Service and Support:	17

Thank You

Thank you for purchasing the Pumpkin X Android KitKat 4.4 tablet PC. We sincerely hope this product meets your expectation. *Enjoy!*

Please contact us at help@americanpumpkins.com if you are unsatisfied with your purchase or have received a defective unit.

Safety Information

Use Responsibly. Read all instructions and safety information before use.



FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

- Do not use this device near water.
- Clean only with a microfiber cloth. Clean
- Do not cover or block any ventilation opening. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
- Install in accordance with the supplied user manual.
- Don't step on or pinch the power cord. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power cord, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
- Unplug this device unplugged during lightning storms or when unused for a long period(s) of time.
- Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products.
- Avoid using the device near strong magnetic fields.
- ESD can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
- **WARNING! NEVER INSERT AN OBJECT INTO THE PRODUCT THROUGH THE VENTS OR OPENINGS. HIGH VOLTAGE FLOWS THRU THE PRODUCT AND INSERTING AN OBJECT CAN CAUSE ELECTRIC SHOCK AND/OR SHORT CIRCUIT INTERNAL PARTS. FOR THE SAME REASON, DO NOT SPILL WATER OR LIQUID ON THE PRODUCT.**
- Do NOT use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools. Do not use this device when condensation may occur.

- This tablet is produced according to all current safety regulations. The following safety tips should safeguard users against careless use and dangers involved with such use.
- Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
- This device must be well ventilated at all time!
- To clean the device, use a soft dry cloth. Do NOT use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
- The seller/manufacturer is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- If the device will not be used for an extended period, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
 - The battery level icon displays  (An empty battery)
 - The device switches off automatically when restarted.
- Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.



WARNING: Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.



Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

Android Kitkat 4.4

Android 4.4 (KitKat®) is the latest version of the world's favorite operating system for mobile phones and tablets. Pumpkin X features this latest Android version.

Pumpkin X Tablet Computer



Quick Start

Powering On/Off

Power on: press and hold the power key for 5 seconds.

Power off: press and hold the power key for 5 seconds → click Power off → click OK

Lock/unlock screen: press the power key to lock/unlock the screen.

Forced shutdown: In the event when the tablet is un-responsive, press Reset key to reset the device by force. Note: Do not use forced shutdown unless necessary. Shut down the device following power off steps.

Using Touch Screen


Single tap: click an icon to select the option you require.

Press and hold: select an icon and hold to drag it to the desktop.

Drag: drag on the desk to switch among different interfaces. To avoid scratching or damaging the screen, never put anything on it

Home Screen

Here is an example of how a typical home-screen looks like with most commonly found items.

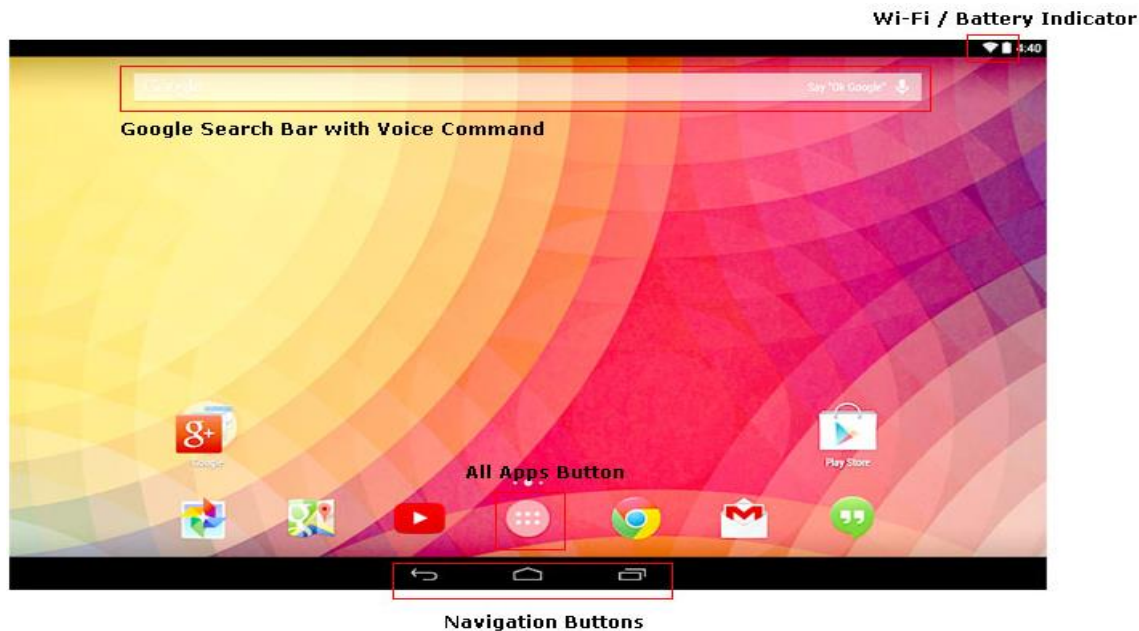

At the bottom of every tablet screen, no matter what you're doing, you'll always find the navigation bar with three buttons:

Back

↶ Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further.

Home

🏠 Opens the central Home screen. To open Google Now, swipe up.

Recent apps

🖼️ Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To re-move a thumbnail from the list, swipe it left or right.

Some apps hide these buttons temporarily, or fade them to small dots in the same position. To bring them back, touch the dots, touch the screen in the middle, or swipe up from the bottom.

Organize Your Home-screen

To add an app icon to a Home screen:

- Go to the Home screen where you want to place the app.
- Touch the All Apps icon.

- Swipe from right to left, if necessary, to find the app you want.
- Touch & hold the app until the Home screen appears, slide it into place, and lift your finger.

Settings

The Settings app controls the core Android settings for networks, hardware, location security, language, accounts, and so on.



Date & Time

- Go to **Settings** → **Date & Time**
- Un-Check the **Automatic date & time** option
- Un-Check the **Automatic time zone** option
- Touch the **Select time zone** and pick your time zone from the list (scroll up/down to pick your time zone)
- Now, check the **Automatic date & time**
- Now, check the **Automatic time zone**

Your tablet should now be set to your local time zone.

Wi-Fi

Follow the below steps to connect to a Wi-Fi network.

Click **Settings** → **Wi-Fi**

Enable **Wi-Fi**. The device will search and list all available **Wi-Fi** networks automatically. The icon next to **Wi-Fi** means you need to enter a password to connect to it.

Click the **Wi-Fi** network you want to connect to → if there is password, you will need to enter the password → Click **Connect**. After connecting to WIFI network, you will see an icon



on the top right.



Click to return to desktop.

Note: If your Wi-Fi is set to be hidden, it will not be searched automatically. You need to click **Add Wi-Fi network**, and then enter required information to add your Wi-Fi.

Display

After powering on the tablet, on the home-screen, always swipe right to unlock the tablet. By default, when the tablet is inactive, it goes into standby mode. To re-start from the stand-by mode, simply press the power button, and swipe right on the locked screen.



Home Screen Wallpaper: To change the home-screen wallpaper, go to **SETTINGS>DISPLAY>WALLPAPER** and choose the wallpaper of your choice.

Sound

Sound can be controlled via the volume rocker buttons location on the top of the tablet. Additionally, you can also control volume via **SETTINGS > SOUND**

Bluetooth

To connect the tablet to another Bluetooth enabled device, follow the below steps:

Turn on Bluetooth:


Go to **SETTINGS > BLUETOOTH** and switch it to **ON** position.

When Bluetooth is on, the Bluetooth status icon appears, which looks like a little Bluetooth logo.

Pairing to Bluetooth Device:

Ensure that Bluetooth is on. Turn on the Bluetooth device or ensure that its Bluetooth radio is on. On the Pumpkin X tablet, go to **SETTINGS> BLUETOOTH**

You'll see the Bluetooth screen. The Bluetooth screen shows any devices already paired with the tablet.

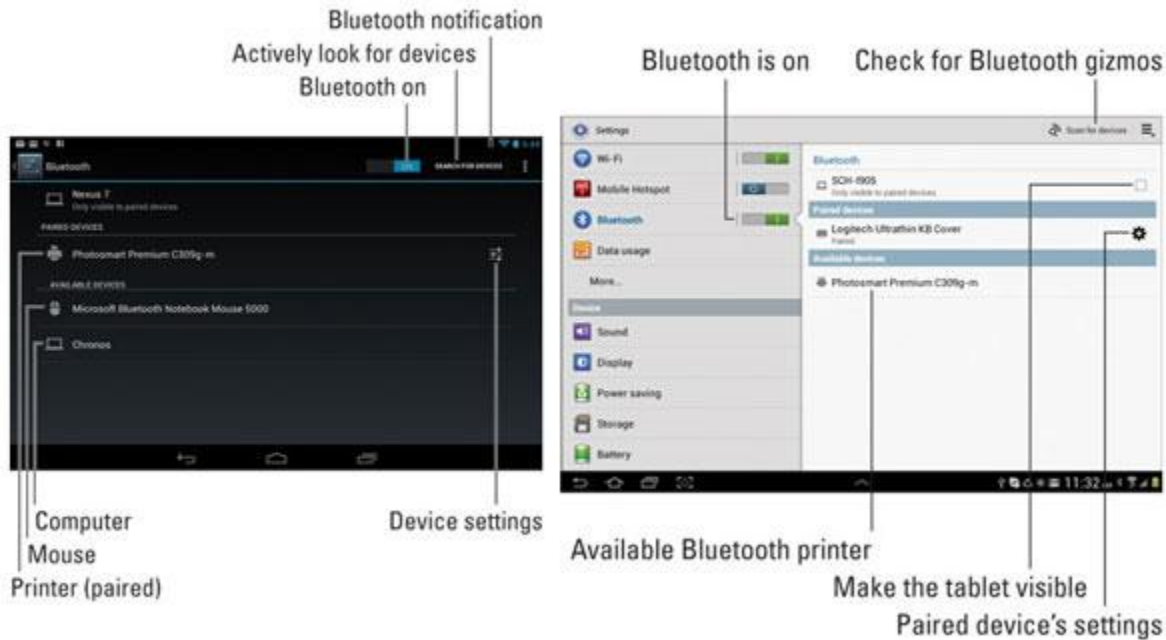

If the Bluetooth device has an option to become visible or discoverable, select it. After making the Bluetooth device visible, it should appear on the Bluetooth screen. If it doesn't, touch the Search for Devices button. Choose the Bluetooth device from the list. If necessary, input the device's passcode or otherwise acknowledge the connection.

After you acknowledge the passcode (or not), the Bluetooth device and your Pumpkin X tablet are connected and communicating. You can begin using the device. Connected devices appear on the Bluetooth Settings window, under the heading Paired Devices.

Basic Functions

Internet

Tap the Chrome Browser icon to access the internet. Note: Make sure your Wi-Fi is enabled and connected to a network.




Email

You can use any of the following icons to check your personal and company email.



Gmail: You will need it to set it up via SETTINGS > ADD ACCOUNT

OFFICE EMAIL: To setup office email, select the **Email App**.



If you do not have another account configured already, you will be prompted to enter your username and password, select **Manual setup**. Keep in mind that your username is your full business email address, for example john@yourdomain.com


If you have already configured an email account, go to Menu on your device and select **Settings**. In the upper right hand corner you should have the option to **Add Account**, select this option.

Select the POP3 / IMAP / Exchange account type. Enter your credentials and your office email account should be setup.

Note: Setting up office email involves additional steps that have not been listed above due to the differences in the account setup process; it is advised that you contact your company network administrator to assist you in this process.

Video

Tap the video app to play videos from your tablet hard drive.



Select a video file to play and the system will enter video playing interface. Click on the screen to display the control menu as shown in the following picture to adjust the video accordingly (volume +/-, playing process bar, previous video, pause/play, next video, screen size and return menu).

Note: Android 4.4 supports desktop multi-menu video playing mode. You can simply desktop-play the video by selecting the desktop playing menu. With this function more than one video can be played at the same time on the same device.


Music

- Click the music icon to enter player interface.
- Select the music you want to play from track/album/artist/playlist.
- Click Previous → Pause → Next icons for playing.
- You can click  to go back to previous interface or click  to return desktop while keeping the music playing. The interface is shown as below:



Audio Recorder

Use the audio recorder app to record audio messages.

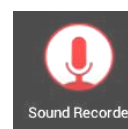

Camera

The Camera app lets you take photos, panoramic photos, videos, and immersive 360-degree photo sphere shots, including what's above and below you.



You can drag the photos taken to enter the album directly. When entering the album from camera mode, you can view the pictures in thumbnail mode up to nine pictures. You can return to camera interface, and you can drag the interface to the front to display and go on taking photos, without needing to click other keys to return camera status.

Press return key or desktop key to exit from camera

Recording Video:


Tap  to switch to the video mode. Tap  to start recording.

Tap  to stop recording. All videos are saved automatically.

Tap on the thumbnail to view the movie. Move the 0 towards the + to zoom in.

Press  to change to the front or rear camera


Gallery




The Gallery app gives you an easy way to browse pictures and videos you've taken with Camera. It also displays screenshots, synced G+ or Picasa albums, and auto backups from other devices.

To open Gallery from the Home screen. Touch the Gallery icon.

To get to the top level of the Gallery app, touch the icon at the upper left. From there, open the drop-down menu to view the available categories.

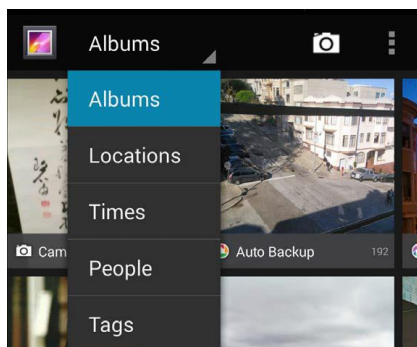

Within each category you can browse groups of images, crop, edit, and tag them, create slideshows, make pictures or videos available offline, and share with friends.



Google Play Store

Google Play brings together all your favorite movies, TV shows, books, music, apps, and more in one place, so you can reach it from any of your devices. To open the Google Play Store app, touch the Play Store icon.

If you purchased content on Google Play in the past, you'll automatically have access to this content on any Android device — just make sure you're signed in using the same account that you used to purchase it. To check:

1. Open the Play Store app.
2. Touch the Drawer icon at the top left.



From here, you can view the current account or switch to another, view your purchased apps, check your wish list, and so on.

To set preferences, clear your search history, and turn on user controls, go to Menu > Settings. For example, to filter Android apps based on maturity level or require a PIN before completing any purchase, touch Content filtering or Password.

To find your content, open any of the Google Play apps from the All Apps screen.

Google Play support: For more details about Google Play, including phone and email support options, visit support.google.com/googleplay.

Calendar



Click calendar icon.

When running the calendar for the first time, you will be asked to login. Enter your email address and password, click next, and complete the settings according to the guide. Then you can use the calendar.

New event

1. In **Calendar** interface, click the date you want to add a new event to.
2. Select the time of the event → Input the details of the event in each field.
3. Click **Complete**.
4. Press Menu key to select the calendar interface you want.

Date showing in gray means there is an agenda.

Clock



1. Click **Clock** icon.
2. Click menu → **Add alarm clock**

3. Set the alarm clock you require. *If Repeat is not selected, the alarm clock will be deleted after alarming.*
4. Click **Activate clock**.
5. Click **Complete**.

Closing alarm clock

When the set alarm time reaches, a window with the name of the alarm clock will pop up. If you want the clock to alarm again in 10 minutes, click **Pause and alarm again**. Click **Cancel** to stop the alarm.

Map

To use this function, make sure you are connected to a Wi-Fi network. Click on the maps icon and make your selection.




File Storage

File storage

Android 4.4 makes it easy to store and browse through pictures, videos, and other files on your device and attach them to an email, Hangout message, and so on. You can also use stored images as your Home screen wallpaper.

For example, to attach an image to an email you're composing, choose **Menu > Attach picture** or **Attach video**.

A set of thumbnails appears. To view more choices, touch the  Drawer icon at the top left. You'll see something like this:

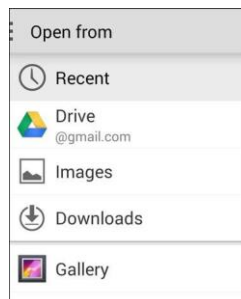

From here, you can view any of these sources:

- **Recent** shows you the photos or videos you've taken or opened most recently.
 - **Drive** lets you attach any Drive documents associated with your account.
 - **Images** displays any photos, videos, or other images on your device.
- Downloads** includes most files (excluding Play content) you've downloaded from emails or the Web

Check Storage & Android Updates

To check the storage of your Pumpkin X tablet, go to **SETTINGS > STORAGE**

You will see three sections:

- Section 1: RAM: Shows approx. ~1.98 GB
- Section 2: 16GB – Actual may be around ~10.9GB (due to various apps installed on the tablet)
- Section 3: Inner Card: 16GB – Actual may be around 15GB (due to apps)

Note: *You can uninstall any apps that you do not use, and you will start seeing the AVAILABLE SPACE go back up to 16GB.*


Android version & updates: To check your version number or get the latest system update for a Nexus or Google Play edition phone, first go to Settings > System > About tablet. Then look for these labels:

- System updates. Touch to check whether you have any pending system updates.
- Android version. Look partway down the list for this heading and the number just below it.

Printing

With Pumpkin X, you can print the content of certain screens (such as web pages displayed in Chrome) to a printer on the same Wi-Fi network as your Android device.

Before you can print, you need a printing service installed on your device. To check what services are currently available, go to **Settings > System > Printing**.

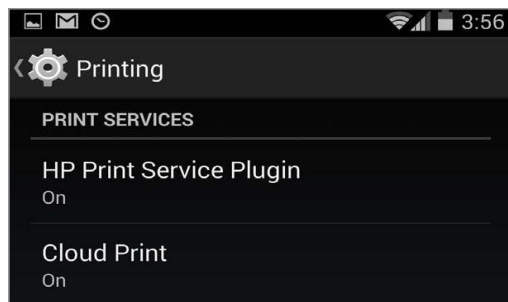

From here, you can open each available service to turn it on or off, check which printers it makes available, add new printers, and adjust the service's settings.

To print a document, such as a webpage in Chrome:

- 1.Touch **Menu > Print**.
- 2.In the dialog that appears, adjust settings such as printer, copies, orientation, and so on.
- 3.Touch Print.

Downloads

Use the Downloads app to view, reopen, or delete files you download from Gmail or other

sources (excluding Google Play books, videos, magazines, and other media.)

In the Downloads app:

- Touch an item to open it.
- Touch headings for earlier downloads to view them.
- Check items you want to share. Then touch the **Share** icon and choose a sharing method from the list.
- Check items you want to delete. Then touch the **Trash** icon.

At the bottom of the screen, touch Sort by size or Sort by date to switch back and forth.

Because Google Play streams your purchases and rentals from Google servers while you're playing them, they don't occupy storage space persistently

Chromecast

Chromecast is a small device that plugs into the back of your TV. It allows you to send videos and music straight from your phone or tablet to your TV. Supported apps currently include:

- YouTube
- Netflix
- Google Play Movies & TV
- Google Play Music
- Hulu Plus

Make sure your phone or tablet is using the same Wi-Fi network as your Chromecast, and that Chromecast is selected as your TV's source input.

To display content from your phone or tablet on your TV:

1. Open the video or music in one of the apps listed above.
2. Touch the Cast button.
3. Play the content as usual to stream it to your TV.

[Additional Functions](#)

Extended Storage Options

SD Card: The device supports storage card of up to 32GB. Insert the storage card into the card slot, and press it down with your finger, the message

Preparing for SD card will display on screen. When this message disappears, it means the TF card is ready, and you can use it.

Removing SD Card: Close all applications or files on the card. Click → Settings → SD card → Remove SD card. Press the card softly and it will be ejected. Then move it out. Do not insert and remove the card repeatedly in a short time, otherwise it may be damaged. We recommend you use a card of famous brand so as to avoid incompatibility issues.

USB Disk: Insert the USB disk into OTG connection wire, → then insert the OTG connection wire into the USB OTG port of the device. You can use the U disk when it is ready.

Do not insert and remove USB disk repeatedly in a short time, otherwise the USB disk may be damaged.

Connecting to PC

Use the OTG supplied cable to connect to the PC via the USB port.

Connecting to Keyboard / Joystick / mice & other devices

You can connect a keyboard, mouse, or even a joystick or other input device to your device via USB or Bluetooth and use it just as you would with a PC.

To connect more than one USB device at a time, use a powered USB hub to reduce the drain on your device's battery.

HDMI – Link Pumpkin X to your TV

The Pumpkin X comes with micro-HDMI port. Simply plug one end of the cable into your device and the other end into your TV. Once connected, what appears on the device will also appear on the TV, so you can look at pictures and video, surf the web, use apps or play games. Be sure to select the HDMI cable that's compatible with your device. You will need 1 micro-HDMI to standard-HDMI cable for this.

3G Calling

3G calling is supported via external USB dongle (not included). Please follow below steps to setup 3G calling from this tablet.

- Before connecting to a 3G network, make sure you are using a 3G network card supported by the device. This device only supports external USB 3G network card.
- After installing a SIM UIM card to 3G network card, install the 3G network card on USB OTG connection wire, and then connect to the device.
- After 3G network card is connected, click Settings → Wireless and network → More → Mobile network for 3G network settings.
- Enable mobile network, tick Enable data traffic → Data roaming, then select Access point name, select Menu and select available network for 3G network access.
- General device can be used directly, but for a few devices, APN needs to be created and network access shall be set before use.
- After setting, you will be able to connect to 3G network. After connection, you will see the 3G icon in the screen. When this 3G icon is gray, it means the system is searching for network, and when it is blue, it means the network is successfully connected.

Accessibility

To use the accessibility options, open **Settings > System > Accessibility**.

To view detailed information about setting up these options, visit Google Accessibility. Options for people with visual impairments include the following:

- TalkBack is a pre-installed screen reader from Google. It uses spoken feedback to describe events, such as notifications, and the results of your actions, such as opening an app.
- Explore by Touch is a system feature that works with TalkBack, allowing you to touch your device's screen and hear what's under your finger via spoken feedback. This feature is helpful to people with no vision.
- Accessibility settings let you modify your device's display and sound options, such as increasing the text size, changing the speed at which text is spoken, and more.

If you have low vision and don't plan to use Explore by Touch, visit support.google.com/nexus to see Help content formatted for sighted users. You can make reading and navigating this material easier by increasing the text size – just open Chrome, go to **Menu > Settings > Accessibility**, and drag the slider to adjust the text size.

You can also try magnification gestures, which allow you to zoom in and out, as well as temporarily magnify what's under your finger. To try magnification gestures, go to **Settings > Accessibility > Magnification gestures**.

Service and Support:

Please contact us at help@americanpumpkins.com for all after sales and technical support.

Glass Parts

The outside cover of your device's screen is made of glass. This glass could break if the device is dropped or receives a substantial impact. If the glass breaks, chips, or cracks, stop using your Pumpkin X and do not touch or attempt to remove the damaged glass.

Battery Safety

The rechargeable battery in your Pumpkin X should be replaced only by an authorized service provider. Charge the battery only in temperatures that range from 32° to 95° Fahrenheit (0° to 35° Celsius).

Product Specifications

- Display — 10.1" diagonal display, 1024 x 600 high-resolution display, 16 million colors.
- Audio — 3.5mm stereo headphone jack, built-in stereo speakers.
- Power — AC power adapter and rechargeable lithium polymer battery.
- Connectivity — Bluetooth, Wi-Fi, HDMI, USB 3.0 (micro-B connector).
- Operating temperature — 32°F to 95°F (0°C to 35°C).

- Storage temperature — 14°F to 113°F (-10°C to 45°C).
- Wi-Fi — 802.11b/g/n



This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in North America / Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).